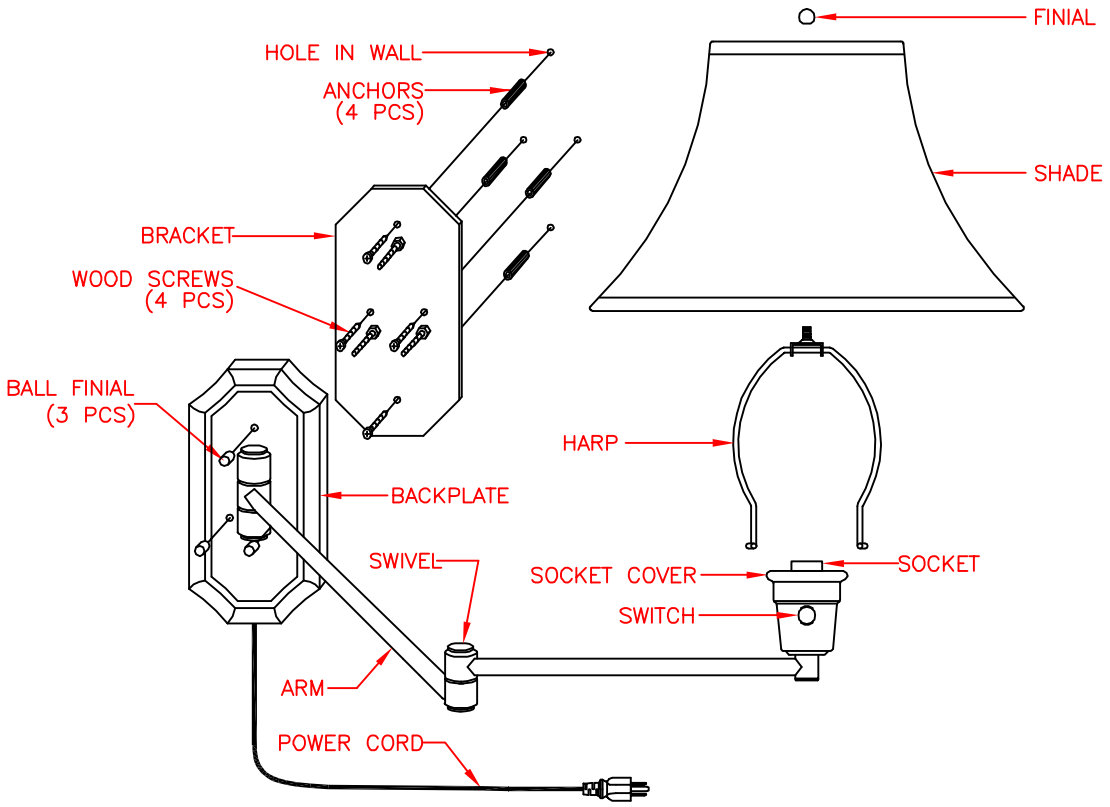


# ASSEMBLY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

### TOOLS

YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER, DRILLER AND PLIERS.

### UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FINIAL, SHADE, HARP, LAMP ASSEMBLY. TO PROTECT THE FINISHES, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:

(3) 5–32 x 1" SCREWS, (3) NUTS, (4) PLASTIC ANCHORS, (4) 1" WOOD SCREWS AND (3) BALL FINIALS.

### ASSEMBLE THE LAMP:

1. REMOVE THE WALL BRACKET FROM THE BACKPLATE BY REMOVING THE (3) BALL FINIALS ON THE FRONT OF THE BACKPLATE.

2. PLACE WALL BRACKET IN THE DESIRED LOCATION ON THE WALL AND MARK WITH A PENCIL. (NOTE: THE WALL BRACKET SHOULD BE MOUNTED ON A WALL STUD USING A SCREWDRIVER. IF MOUNTING ON A HOLLOW AREA, DRILL 1/4" PILOT HOLES AND INSERT ANCHORS WHERE THE LOCATION WAS MARKED.) PLACE THE WALL BRACKET ON THE WALL, INSERT AND TIGHTEN SCREWS. (SEE WALL BRACKET ASSEMBLY ABOVE)

3. MOUNT THE BACKPLATE TO THE WALL BRACKET WITH THE (2) BALL FINIALS REMOVED ABOVE. (MAKE SURE THE SCREWS GO THROUGH THE HOLES IN THE BACKPLATE. TIGHTEN THE BALL FINIALS BEING CAREFUL NOT TO STRIP THEM.)

4. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE TWO ENDS INTO SOCKET COVER.

5. PLACE A SHADE ONTO HARP AND SECURE WITH FINIAL.

6. INSTALL A 150 WATT MAX. MEDIUM BASE 3–WAY TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

7. PLUG THE POWER CORD INTO A POWER OUTLET AND TURN ON AT SWITCH.